




Pipette Electrode Preparation



SILVER WIRE 0.3 - 0.5 mm

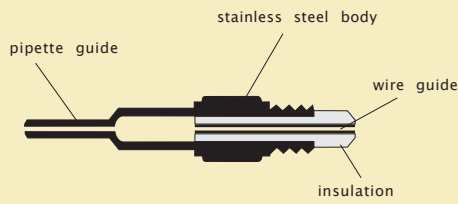


make tiny bend at end of wire




insert wire into holder




screw holder onto probe

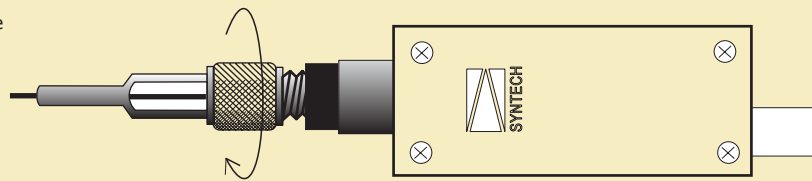


GLASS PIPETTE ELECTRODE diam. 1.5 mm

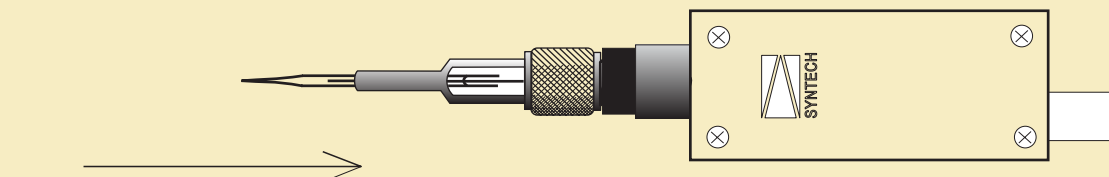

insert pipette into electrode holder

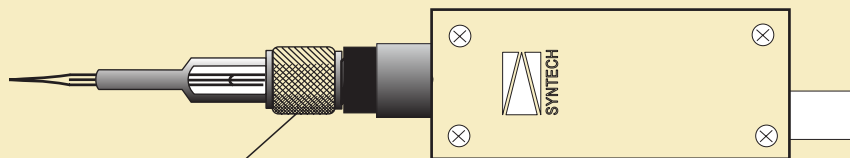


Do NOT connect electrode holder to ground!

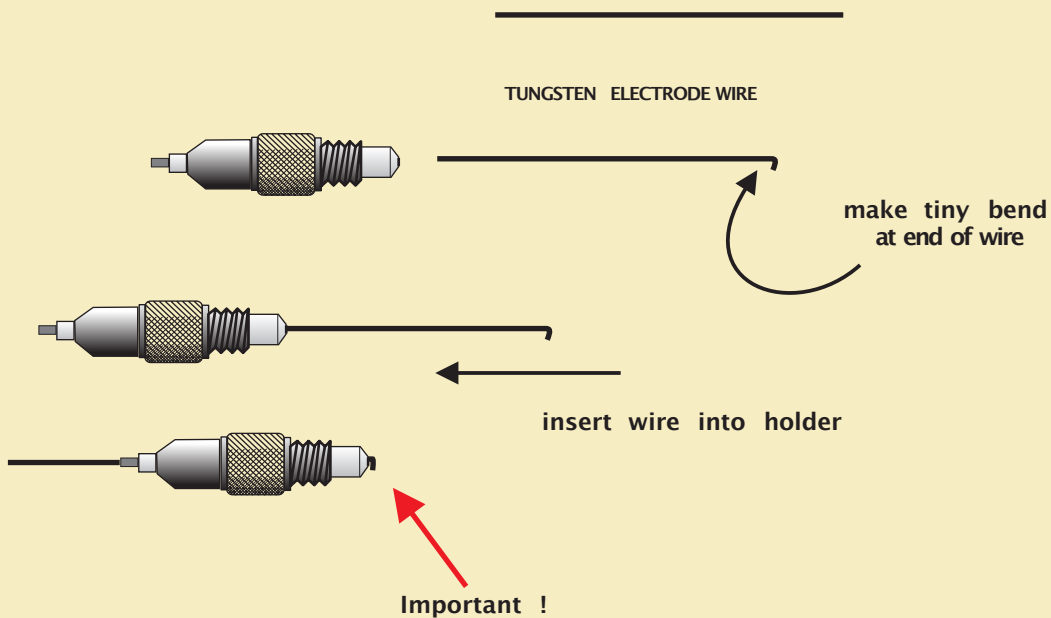

Tungsten electrode insertion

Note: The bend at the end of the wire is necessary to ensure proper contact with the input of the probe !

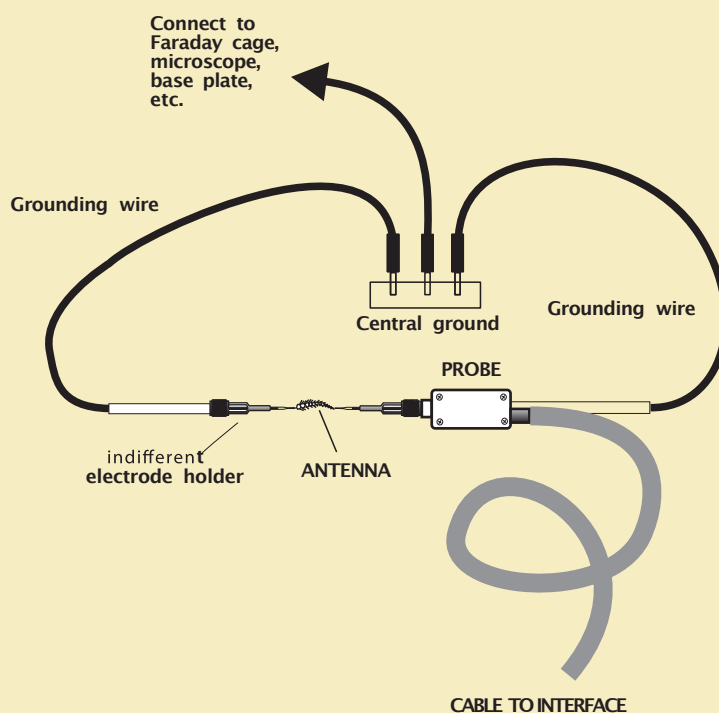

Probe input configuration