



Pipette Electrode Preparation

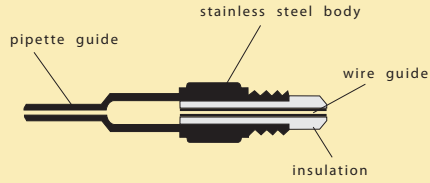


CROSS SECTION of ELECTRODE HOLDER




SILVER WIRE 0.3 - 0.5 mm




make tiny bend
at end of wire

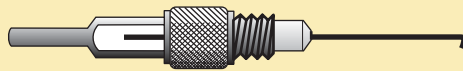


insert wire into holder

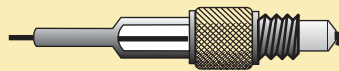


screw holder onto probe

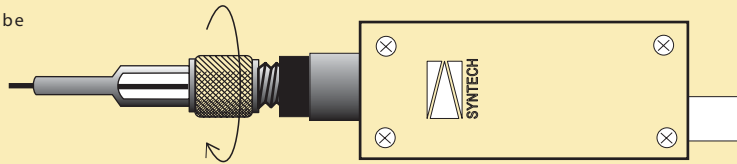


GLASS PIPETTE ELECTRODE diam. 1.5 mm

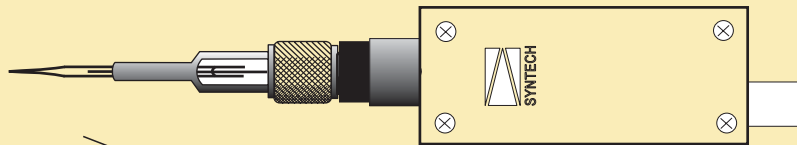

insert pipette into electrode holder

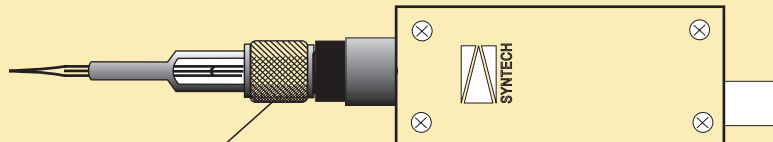


Do NOT connect electrode holder
to ground!

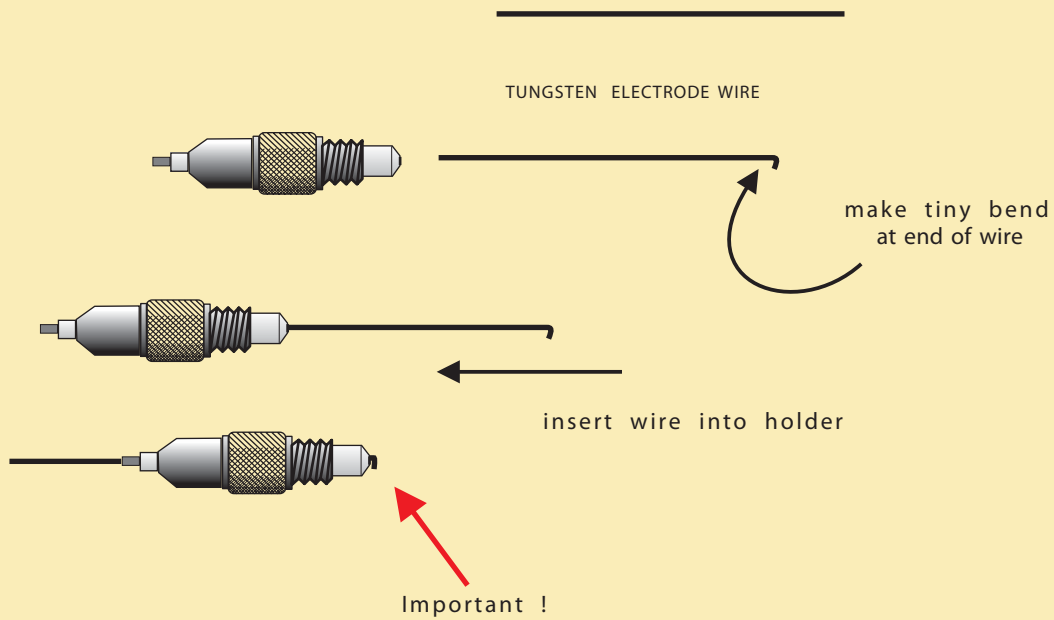

Tungsten electrode insertion

Note: The bend at the end of the wire is necessary to ensure proper contact with the input of the probe !

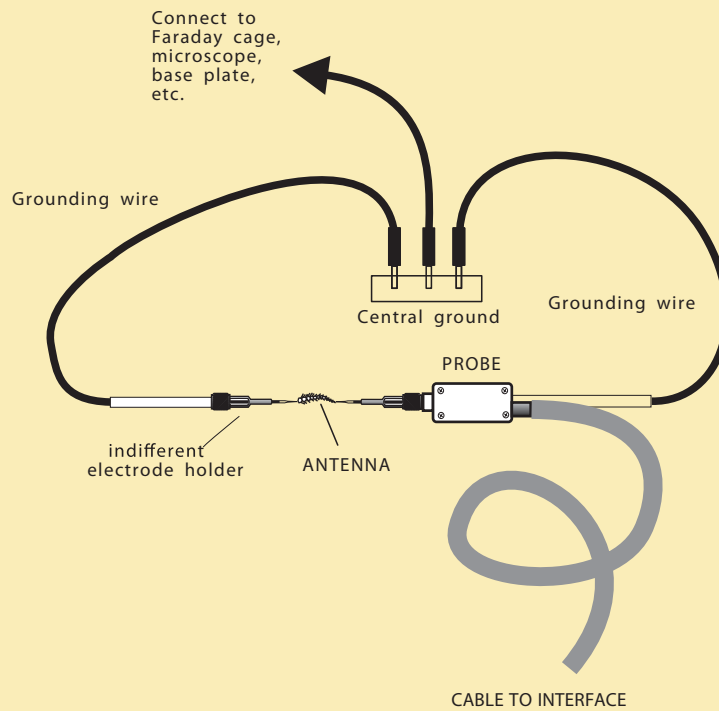

Probe input configuration